SCOSCHE

NN1666B

IN-DASH STEREO INSTALLATION KIT FOR 2010-UP NISSAN SENTRA

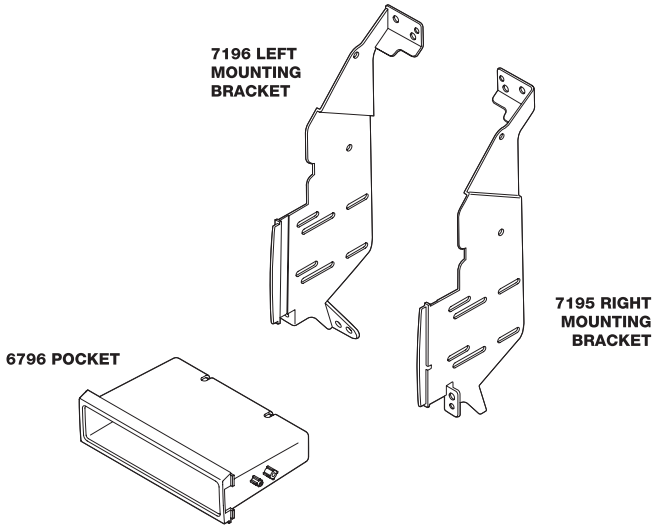

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2010-Up Nissan Sentra vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS			
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.			
NN04B	**NAA2B**	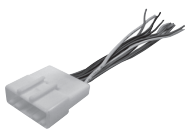	
2007-up Nissan Sentra	2007-up Nissan Sentra Antenna Adapter		

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/ codes and information pertaining to installation of this kit (NN1666B) in 2010-Up Nissan Juke vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2011 SCOSCHE INDUSTRIES, INC.

FACTORY STEREO REMOVAL

2010-UP NISSAN SENTRA

1. Remove shifter knob. Slide down chrome trim, release snap ring in shifter knob and pull knob off.
2. Remove shifter cover plate. The plate snaps off.
3. Use panel removal tool (PRT) to remove A/C controls underneath the stereo. Disconnect and remove.
4. Using PRT unsnap the panel above the factory stereo assembly.
5. Remove (4) Phillips screws holding the stereo, stereo display and A/C display. Disconnect and remove.
6. Remove (8) Torx screws from stereo. Slide stereo out of brackets and remove.

MOUNTING THE STEREO

DIN-ISO MOUNT

1. Remove factory pocket from factory brackets and install onto 7195 & 7196 Scosche brackets.
2. Align the 6796 pocket with the lower holes on the 7195 & 7196 brackets. Secure the pocket to the brackets using (2) supplied screws in the installation kit.
3. Mount aftermarket stereo to the mounting brackets using screws supplied with the aftermarket stereo. **Note:** If hardware is not supplied with aftermarket stereo reuse hardware from factory stereo.

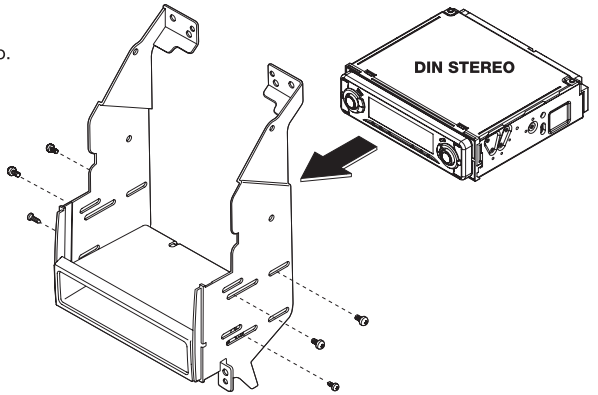

DOUBLE DIN-ISO MOUNT

1. Remove factory pocket from factory brackets and install onto 7195 & 7196 Scosche brackets.
2. Mount aftermarket stereo to the mounting brackets using screws supplied with the aftermarket stereo. **Note:** If hardware is not supplied with aftermarket stereo reuse hardware from factory stereo.

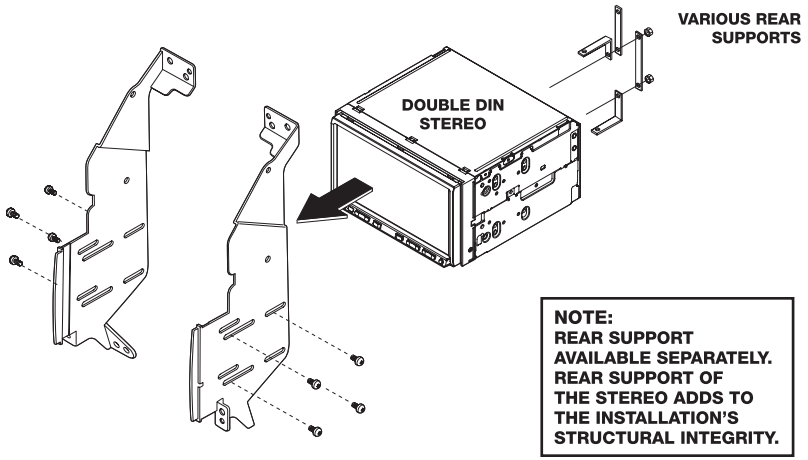

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORT OF THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.